



Type	Profile				Description	Manual App Control	
	Fixture ID	Model / Name	Icon	Fixture mode			
Relay	39288**	Toggle		PWM/Elements{OHI, HWTemp}	Relay fixture. Toggle switch for relay output control. All lamps button or press/slide on the same profile icon <b>DOES</b> change the relay status.	OUT: Toggle button for relay output (O)	OUT
	39289	iToggle		PWM/Elements{OHI, HWTemp}	Relay Profile. Independent toggle switch for relay output control. All lamps button or press/slide on the same profile icon does <b>NOT</b> change the relay status.	OUT: Toggle button for relay output (O)	OUT
	39290	Press		PWM/Elements{OHI, HWTemp}	Relay Profile. Independent push button for relay output control. Releasing the push button deactivates the relay immediately. All lamps button or press/slide on the same profile icon does <b>NOT</b> change the relay status.	OUT: Push button for relay output (O)	OUT
	39291	Pulse 0.3s		PWM/Elements{OHI, HWTemp}	Relay Profile. Independent push button for relay output control. Pressing the push button will activate the relay for 0.3 seconds. All lamps button or press/slide on the same profile icon does <b>NOT</b> change the relay status.	OUT: Push button for relay output (O)	OUT
	39292	Pulse 1s		PWM/Elements{OHI, HWTemp}	Relay Profile. Independent push button for relay output control. Pressing the push button will activate the relay for 1 second. All lamps button or press/slide on the same profile icon does <b>NOT</b> change the relay status.	OUT: Push button for relay output (O)	OUT
	39293	Pulse 10s		PWM/Elements{OHI, HWTemp}	Relay Profile. Independent push button for relay output control. Pressing the push button will activate the relay for 10 seconds. All lamps button or press/slide on the same profile icon does <b>NOT</b> change the relay status.	OUT: Push button for relay output (O)	OUT
Misc.	39294	Presence		Sensor{OHI,HWTemp}	Presence fixture. It doesn't appear under Lamps tab. A traditional motion sensor can be connected to behave as a Casambi presence sensor.	-	It appears under "Sensors" tab.
	39295	Push Button x2		PushButton{OHI,HWTemp}	Push button x2 fixture. It doesn't appear under Lamps tab. Two normally open (N.O.) push buttons can be connected.	-	It appears under "Switches" tab.  PUSH BUTTONS <div><div>PB1</div>Not Used &gt;</div> <div><div>PB2</div>Not Used &gt;</div> <div>Select the device's button functions</div>
	39296	Repeater		PushButton{OHI,HWTemp}	Repeater fixture. It doesn't appear under Lamps tab. The device will only behave as a repeater, always using a maximum radio TX power of +8dBm in all networks.	-	It appears under "Switches" tab.

\*\* Default profile



## Additional information

Summary of some terms and abbreviations that have been used throughout the document.

Abbreviation:	Description:
iToggle	The “i” in “iToggle” refers to the fact that the profile toggle switch is <b>independent</b> of the “All lamps” control or the control made by sliding over the profile icon.



## Revision history

Date:	Version:	Description:
17/03/2025	1.0	Initial release.