Type	Profile				Description	Manual App Control	
	Fixture ID	Model / Name	Icon	Fixture mode			
Relay	39318**	**Toggle**		PWM/Elements{OHI, HWTemp}	Relay x2 fixture. Two toggle switches for relay output control. All lamps button or press/slide on the same profile icon **DOES** change the status of both relays.	**OUT1:** Toggle button for relay output (O1) **OUT2:** Toggle button for relay output (O2)	
	39319	**iToggle**		PWM/Elements{OHI, HWTemp}	Relay x2 fixture. Two independent toggle switches for relay output control. All lamps button or press/slide on the same profile icon does **NOT** change the status of both relays.	**OUT1:** Toggle button for relay output (O1) **OUT2:** Toggle button for relay output (O2)	
	39320	**Press**		PWM/Elements{OHI, HWTemp}	Relay x2 Profile. Two independent push buttons for relay output control. Releasing either of the two buttons will immediately deactivate its corresponding relay. All lamps button or press/slide on the same profile icon does **NOT** change the status of both relays.	**OUT1:** Push button for relay output (O1) **OUT2:** Push button for relay output (O2)	
	39321	**Pulse 0.3s**	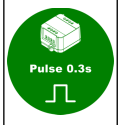	PWM/Elements{OHI, HWTemp}	Relay x2 Profile. Two Independent push button for relay output control. Pressing either of the two push button will activate its corresponding relay for 0.3 seconds. All lamps button or press/slide on the same profile icon does **NOT** change the status of both relays.	**OUT1:** Push button for relay output (O1) **OUT2:** Push button for relay output (O2)	
	39322	**Pulse 1s**	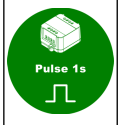	PWM/Elements{OHI, HWTemp}	Relay x2 Profile. Two Independent push button for relay output control. Pressing either of the two push button will activate its corresponding relay for 1 second. All lamps button or press/slide on the same profile icon does **NOT** change the status of both relays.	**OUT1:** Push button for relay output (O1) **OUT2:** Push button for relay output (O2)	
	39323	**Pulse 10s**	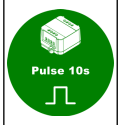	PWM/Elements{OHI, HWTemp}	Relay x2 Profile. Two Independent push button for relay output control. Pressing either of the two push button will activate its corresponding relay for 10 seconds. All lamps button or press/slide on the same profile icon does **NOT** change the status of both relays.	**OUT1:** Push button for relay output (O1) **OUT2:** Push button for relay output (O2)	
	39324	**iToggle + Press**		PWM/Elements{OHI, HWTemp}	Relay x2 Profile. Two Independent mixed elements for relay output control. One toggle switch for one relay output control (O1) and one push button for the second relay output control (O2). Releasing the push button will immediately deactivate its corresponding relay. All lamps button or press/slide on the same profile icon does **NOT** change the status of both relays.	**OUT1:** Toggle button for relay output (O1) **OUT2:** Push button for relay output (O2)	
	39325	**iToggle + Pulse 0.3s**	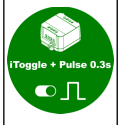	PWM/Elements{OHI, HWTemp}	Relay x2 Profile. Two Independent mixed elements for relay output control. One toggle switch for one relay output control (O1) and one push button for the second relay output control (O2). Pressing the push button will activate its corresponding relay for 0.3 seconds. All lamps button or press/slide on the same profile icon does **NOT** change the status of both relays.	**OUT1:** Toggle button for relay output (O1) **OUT2:** Push button for relay output (O2)	
	39326	**iToggle + Pulse 1s**	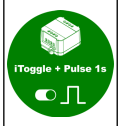	PWM/Elements{OHI, HWTemp}	Relay x2 Profile. Two Independent mixed elements for relay output control. One toggle switch for one relay output control (O1) and one push button for the second relay output control (O2). Pressing the push button will activate its corresponding relay for 1 second. All lamps button or press/slide on the same profile icon does **NOT** change the status of both relays.	**OUT1:** Toggle button for relay output (O1) **OUT2:** Push button for relay output (O2)	

	39327	**iToggle + Pulse 10s**		PWM/Elements{OHI, HWTemp}	Relay x2 Profile. Two Independent mixed elements for relay output control. One toggle switch for one relay output control (O1) and one push button for the second relay output control (O2). Pressing the push button will activate its corresponding relay for 10 seconds All lamps button or press/slide on the same profile icon does **NOT** change the status of both relays.	**OUT1:** Toggle button for relay output (O1) **OUT2:** Push button for relay output (O2)	
	39328	**Press + Pulse 0.3s**		PWM/Elements{OHI, HWTemp}	Relay x2 Profile. Two Independent push button for relay output control. Releasing the first push button will immediately deactivate its corresponding relay output control (O1). Pressing the second push button will activate its corresponding relay output control (O2) for 0.3 seconds. All lamps button or press/slide on the same profile icon does **NOT** change the status of both relays.	**OUT1:** Push button for relay output (O1) **OUT2:** Push button for relay output (O2)	
	39329	**Press + Pulse 1s**		PWM/Elements{OHI, HWTemp}	Relay x2 Profile. Two Independent push button for relay output control. Releasing the first push button will immediately deactivate its corresponding relay output control (O1). Pressing the second push button will activate its corresponding relay output control (O2) for 1 second. All lamps button or press/slide on the same profile icon does **NOT** change the status of both relays.	**OUT1:** Push button for relay output (O1) **OUT2:** Push button for relay output (O2)	
	39330	**Press + Pulse 10s**		PWM/Elements{OHI, HWTemp}	Relay x2 Profile. Two Independent push button for relay output control. Releasing the first push button will immediately deactivate its corresponding relay output control (O1). Pressing the second push button will activate its corresponding relay output control (O2) for 10 seconds. All lamps button or press/slide on the same profile icon does **NOT** change the status of both relays.	**OUT1:** Push button for relay output (O1) **OUT2:** Push button for relay output (O2)	
Misc.	39331	**Presence**		Sensor{OHI,HWTemp}	Presence fixture. It doesn't appear under Lamps tab. A traditional motion sensor can be connected to behave as a Casambi presence sensor.	–	It appears under "Sensors" tab.
	39332	**Push Button x2**		PushButton{OHI,HWTemp}	Push button x2 fixture. It doesn't appear under Lamps tab. Two normally open (N.O.) push buttons can be connected.	–	It appears under "Switches" tab.
	39333	**Repeater**		PushButton{OHI,HWTemp}	Repeater fixture. It doesn't appear under Lamps tab. The device will only behave as a repeater, always using a maximum radio TX power of +8dBm in all networks.	–	It appears under "Switches" tab.

** Default profile

Additional information

Summary of some terms and abbreviations that have been used throughout the document.

Abbreviation:	Description:
iToggle	The "i" in "iToggle" refers to the fact that the profile toggle switch is **independent** of the "All lamps" control or the control made by sliding over the profile icon.

Revision history

Date:	Version:	Description:
17/03/2025	1.0	Initial release.